ROIDMI Cordless Vacuum Cleaner User Manual

Read carefully before use, and keep it well for future reference.



Welcome to ROIDMI Technology

Thank you for choosing cordless vacuum cleaner.

It is a versatile smart vacuum cleaner with microfiber mop tank and automatic light, combining sweeping and mopping. Powered by a 120000 RPM brushless motor, it comes with a super 25000Pa suction, providing deep and all-around cleaning for your house. After cleaning, a gentle touch for wireless charging would just make cleaning fun and hassle-free.

It is also controllable in exclusive intelligent APP "ROIDMI Vacuum Cleaner", for dust cup, filter, power and running status.

ROIDMI smart tech makes your life better and cozier.

Now, just enjoy!

Contents

Safety Precautions

vvarning	2
Attention	5
Product Description	
Main Machine ·····	6
Accessories	7
Fittings	7
Product Installation	
Vacuum Cleaner Installation	7
Installation of Accessories	7
Installation of Fittings	8
Fixing of Vacuum Cleaner	8
Product Usage	
Power On/Off and Suction Power Switch	9
Adapter Usage	9
Status Indicator LEDs	10
Power Adapter Basic Parameters	10
Usage of Rolling Brush ·····	10
Usage of Accessories	
Quick Setting	
About works with mijia	11
Product Cleaning	
Removal and Installation of the Dust Cup	11
Removal and Installation Instruction of the Rear Filter	
Component Cleaning	13
Rolling Brush Replacement ·····	13
Product Troubleshooting	14
Detailed Packing List	14
Basic Parameters	14
Statement of Harmful Substances	
Warranty	
Warranty Contents ······	15
Cordless Vacuum Cleaner Performance Fault List	
Cordless Vacuum Cleaner Product Warranty Card	
Cordless Vacuum Cleaner Product Maintenance Record	16
Cordiess vacuum Cicaner Froduct Manntenance Necord	10

Safety Precautions

Read the manual before use.

Warning: in order to avoid causing harm to you and others and causing unnecessary property damage, read carefully and observe the following "safety precautions" before use. The safety precautions are divided into two parts: "Warning" and "Attention". Both "Warning" and "Attention" are important parts of safe use. Be sure to follow them.



Marning Notices that can lead to death or serious injury when not following the instructions



Attention Notices that can lead to slight injury or product safety risk



Warning

- 1. Do not use this product near wet places such as the bathroom.
- 2. Do not use on cleaning liquids, matches and damp rubbish.
- 3. Do not unplug / plug in or contact the adapter socket with wet hand.
- 4. Do not use broken power plug and loose socket.
- 5. Do not use the vacuum cleaner to clean kerosene, gasoline and other flammable liquids and objects with spark, cartridge, toner and other combustible dust or use the vacuum cleaner near the above items and in inflammable and explosive gases, so as not to cause fire.
- 6. Do not disassemble, repair or transform by yourself to avoid fire, injury or improper operation, except certified replacement of consumables according to this manual.
- 7. Use AC power at rated voltage, do not use generator or DC power supply, etc., to avoid causing fire and electric shock.
- 8. Regularly use dry cleaning cloth to clean the dust on the plug, so as to avoid fire due to poor insulation and other reasons.
- 9. Make sure that the plug is well inserted in the bottom to avoid electric shock, short circuit and fire.
- 10. In case of any abnormal failure, stop using it immediately to avoid causing smoke, fire and electric shock.
- 11. When in following conditions, such as body distortion, unusual heating, smell of burning and there is any abnormal sound during operation, immediately cut off the power supply and unplug the plug, place the product in an open and non-combustible area, ensure the safety and the manufacturer or its maintenance staff shall replace and repair it to avoid any danger.
- 12. Be sure to remove the plug from the power socket before cleaning and maintenance to avoid electric shock and injury.
- 13. If the electric brush is found to be abnormal in use, turn off the power switch and immediately check whether the electric brush is wrapped around the hair or other excessively long fibers, and clean it in time.
- 14. Do not pour water on the body of the machine and plug or immerse the body and/or plug into water.
- 15. Do not charge the vacuum cleaner with other adapter.
- 16. Hold the plug when unplugging it. Do not pull it from the power cord.
- 17. Keep all parts of the body, such as hair, loose clothes and fingers, away from each end of the interface and the mouth of the roller brush.
- 18. Do not operate the vacuum facing the ears, eyes, mouth and other body parts.
- 19. The battery is a sealed device that normally has no safety hazards. In extreme cases, liquid comes out of the battery, which may cause irritation or burns. In case of accidental contact, follow the following precautions: If it touches the skin --wash with soapy water; if eyes contact it—immediately rinse with water for at least 15minutes and seek medical help.
- 20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 21. Keep the vacuum cleaner away from the hospital's electromagnetic equipment.
- 22. For indoor use only, do not expose to rain.
- 23. If the cord is damaged, it must be replaced by the manufacturer, our service agent or other qualified persons, order to avoid a hazard.
- 24. The charger must not be used if the enclosure is damaged because this will cause hazard of electric shock.
- 25. The power adapter is only used for the indicated vacuum cleaner.
- $26. \ Before \ charging, \ check \ whether \ the \ voltage \ specified \ on \ the \ marking \ label \ corresponds \ to \ the \ mains \ voltage.$
- 27. Keep the charger away from all sources of heat.
- 28. Do not immerse the appliance in water.
- 29. Do not continue to use the appliance in such cases: drop, impact by a heavy object, other means of damage etc.



If it occurs, get the charger, repaired by our service agent.

- 30. Do not disassemble the battery charger by yourself to avoid fire hazard or electric shock.
- 31. Remove the plug from the socket before cleaning or maintaining the charger.
- 32.Do not try to charge non-rechargeable batteries with this charger.
- 33. When the vacuum cleaner is attached to the magnetic wall mount, do not let children or pets collide with it to avoid damage.
- 34.Before discarding the vacuum cleaner, make sure that the battery is removed from the appliance.
- 35. Before removing the battery, be sure to turn off the vacuum cleaner before operating.




Attention


- 1. Do not run for a long time when the vacuum cleaner is blocked.
- 2. Do not block the vent (to avoid deformation to the body of the machine, failure or fire caused by overheating).
- 3. Do not drag and drop the body of the machine (to avoid scratching the ground).
- 4. Do not wave the body of the machine. Do not let children play with it, etc (to avoid injury or damage).
- 5 . Do not drop the product into other objects and apply pressure to the product (to avoid fire and electric shock caused by failure).
- 6. Be sure to install the dust cup before using it (to avoid motor damage).
- 7. Check whether the adapter charging cord is in good condition before charging.
- 8. Before using the vacuum cleaner for the first time or replacing the specified filter element, turn off the power of the vacuum cleaner and ensure that the filter element is installed in place.
- 9. When there is a lot of garbage in the dust cup, clean it at that time to ensure unimpeded ventilation path, so as to avoid blocking, resulting in reduced suction or heating of the motor.
- 10. The waste battery pack should be recycled safely. Do not throw it away just anywhere.
- 11. Do not draw large, soft, sticky objects such as wool, hair, bulk cotton, dough, and chewing gum into the vacuum cleaner.
- 12. Use the vacuum cleaner to clean the stairs with special care so as not to fall down.
- 13. Be sure that the vacuum cleaner power is turned off when the electric brush and accessories are reconnected or disconnected.

Product Description


Main Machine

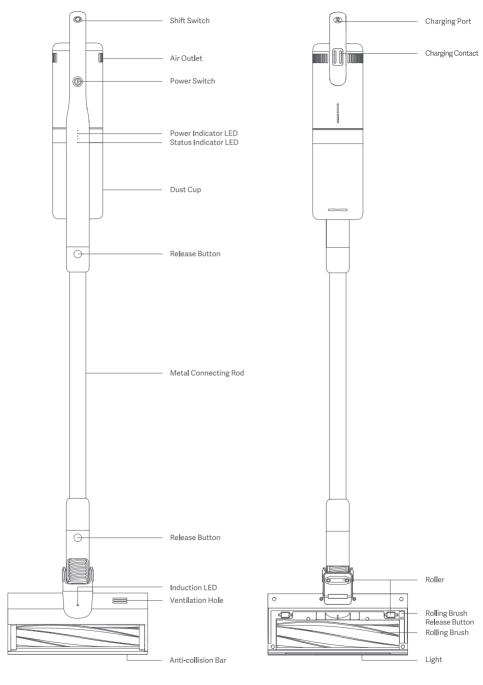

Accessories

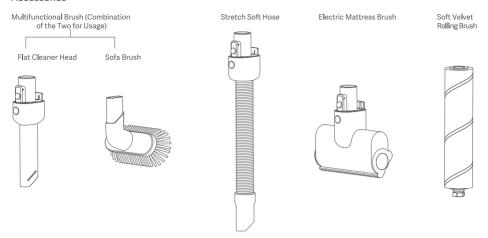

Fittings

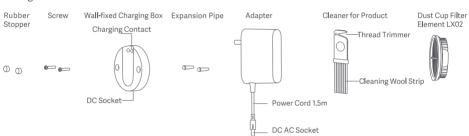

Product Installation

Vacuum Cleaner Installation

Step 1. Insert the end with release button of the electric brush into the corresponding port of the metal connecting rod vertically as shown in the figure, until it clicks into the right position.

Step 2. Insert the end with release button of the metal connecting rod into the corresponding port of the main machine vertically, until it clicks into the right position.





Attention

1.Be careful when installing electric brush to avoid gripping hand.

2.Before installing the electric brush, make sure the metal contact is clean and dry, to avoid unnecessary damage caused by short circuit during use due to insufficient connection or water.

Installation of Accessories

For the convenience of use, this product is specially equipped with accessories for the main machine of the vacuum cleaner. When the main machine of the vacuum cleaner is used separately, it can be connected to the accessories directly as required.

1. Connection of flat cleaner head: insert the end with release button of the flat cleaner head into the corresponding port of the main machine, until it clicks into right position.



2. Sofa Brush Installation: Put the sofa brush flat mouth upward, insert into the flat cleaner head along the direction shown below vertically, until it clicks into right position.



Tips:


The attachment of the vacuum cleaner main machine can be directly connected with the stretch soft hose and the mattress brush. The connection mode is the same as that of the flat cleaner head. Sofa brush can also be directly connected to the stretch soft hose, and the connection mode is the same as flat cleaner head connection mode.

Installation of Fittings

Installation of Wall-fixed Cordless Charging Box

Method 1: Nailing installation of wall-fixed charging box

 When installing wall-fixed charging box, please contact the charging box contact with the contact of host first. After moving the host to the wall of charging box, compare the installation hole position of charging box, then insert the expansion pipe and expansion screw in turn. (When using the screws to fix wall-fixed charging box, please do not take off glue-separating paper and use it as reserved screw-free installation.)

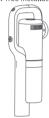

DO DO



Step 1: With the help of drilling electric cone for positioning

Step 1: With the help of drilling electric cone for positioning

Step 3: Use screws to fix wall-fixed charging box

Step 4: Install rubber plug

Method 2: Screw-free installation of wall-fixed charging box

When installing the wall-fixed charging box, please first measure the height of 92 cm from the ground, remove the foam cotton glue-separating paper from the wall-fixed charging box, and stick the charging socket of the wall-fixed charging box downward at the measured position.



Step 1: Measuring dimension



Step 2: Remove the glue-separating paper



Step 3: Stick it to the wall



Attention

Recommended for use on glass and ceramic walls; keep the walls clean before installing, no dirt, impurities, etc.

Fixing of Vacuum Cleaner

1. Place the electric brush horizontally on the ground.

2. Move the vacuum cleaner main machine to adhere to fully adheres to the wall-fixed charging box.





 
- 1. When placing the main machine, please remove the water tank module first, so as to avoid the sliding of the main machine when the electric ground brush tilts.
- 2. When the main body is placed to the wall suction fixing box, keep children and pets away from the vacuum to avoid bumping and potential damage.
- 3. Move the main machine horizontally to adhere to fully adheres to the wall-fixed charging box, in order to avoid the occurrence of dumping injuries of main machine due to unfixed magnetic suction.
- 4. Make sure that the power indicator LED lights up when charging the main machine to ensure that charging is in progress.

Product Usage

Power On/Off and Suction Power Switch

Press on the button of the power switch for 1 second to start the machine in normal mode.

During operation state, click the shift button or power switch button, and the suction power will switch among the normal mode, high speed mode and powerful mode.

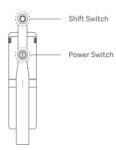

Adapter Usage

1. Fix the charging cable

Before charging, make sure that the adapter is connected to the rated AC power supply. The DC metal charging socket is inserted into the charging hole at bottom of wall-fixed charging box.



AC Power Interface

2. Charge

Attach the main machine to the wall-fixed charging box, if the charging indicator light increases successively according to the power condition, it indicates that the vacuum cleaner is charging, and when the indicator light is fully on, the vacuum cleaner battery is full.



Λ

Warning

- 1. For indoor use only,do not expose to rain.
- 2. If the cord is damaged, it must be replaced by the manufacturer, our service agent or a qualified person in order to avoid a hazard.
- 3. The charger must not be used if the enclosure is damaged because this might cause a hazard of electric shock.
- 4. The power adapter is only used for the indicated vacuum cleaner.
- 5. Before charging, check whether the specified voltage corresponds to the mains voltage.
- 6. Keep the charger from all sources of heat.
- 7. Do not immerse the appliance in water.
- 8. Do not continue to use the appliance in the following cases: a drop, impact by a heavy object, other means of damage, etc. If it occurs, get the charger repaired by our service agent.
- 9. Do not disassemble the battery charger by yourself to avoid fire hazard or electric shock.
- 10. Remove the plug from the socket before cleaning or maintaining the charger.
- 11. Do not try to charge non-rechargeable batteries with this charger
- 12. Keep out of reach of children when wall suction fixing box is connected to the power supply.

Status Indicator LEDs

Performance Characteristics	Charging	Discharging	State light (red and blue)
	•	•	•
Displaying State	* •	•	0
	0	0	*

Remarks: 🌣 Indicates Flashing; O Indicates that the flicker is off; • Indicates that it is always on.


Red light flashing indicates reminding of full dust; red light always being on indicates missing HEPA filter; blue light always being on indicates successful Bluetooth connection; red and blue light alternately flashing indicates the machine is abnormal.

Power Adapter Basic Parameters


Product Name	Power Adapter
Rated Input Voltage	100-240V
Rated Input Current	1.0A
Rated Output Voltage	34.2V
Rated Output Current	1.0A
Product Model	European Union: RM-C-Y01EU/United Kingdom: RM-C-Y01UK/United States: RM-C-Y01US/ Australia: RM-C-Y01AU/Korea: RM-C-Y01KR/Japan: RM-C-Y01JP/Taiwan: RM-C-Y01TW

Usage of Rolling Brush

1. Carbon fiber rolling brush can be used for floor tile, floor and undercoat carpet.

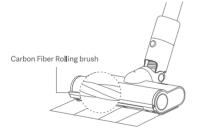

2. Soft velvet rolling brush can be used for floor tile,wooden floor and polish its surface. It is not recommended to clean carpet as shown in the image below.

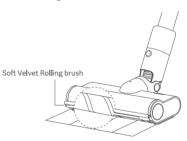




Attention

- 1.Do not suck up water.
- 2.Do not assemble or use device when the roller brush is wet.
- 3.Ensure installation in place, no parts missing when replace brushes.


Tips: When LED lamp works on the dark corner, it will be on and adjust the light automatically, easy and convenient.

Usage of Accessories

 
1. Flat cleaner head: use for cleaning doors and windows, stairs and other narrow gaps.

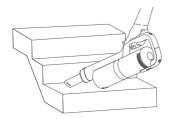

 
2. Stretch soft hose: use for hard-to-reach corner cleaning.

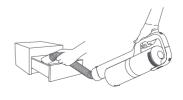

3. Electric Mattress Brush: Use for removing dust and mite on the bed, curtain and other home textiles.

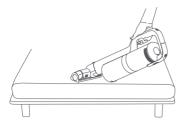

4. Multifunctional Brush (Used with flat cleaner head): Use for cleaning dust of sofa, seat, cloest, window and the dust adhered to the furniture surface.

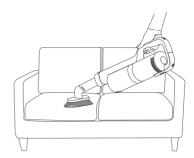



Attention

- 1. Please use with care when clean windows and doors in case damaging glass.
- 2. Please keep kids away from electric mattress brush during using.
- 3. Please do not use electric mattress brush to suck little cloth, in case of blocking.
- 4. Please empty drawer first to avoid device damage when using stretch soft hose to clean drawer.
- 5. Please clean the vauum accessories after each use, for keeping food residue, cotton fiber long time in the accessories will make them rot resulting in device damage.

Quick Settings

This product is compatible with ROIDMI vacuum cleaner platform, this product with intelligent App connection, to support Android and IOS systems.

- 1. Download APP
- Search for "ROIDMI Vacuum Cleaner" APP in the App Store or scan the following QR cord to download and install it.
- 2. Add a device

Open the home page of "ROIDMI Vacuum Cleaner" APP and select "Add Device" on the page to add "ROIDMI NEX Vacuum". After successful adding, you can find this device in the list of "My Device".

- 3. Bluetooth connection
- Open the "ROIDMI Vacuum Cleaner" APP and the system will match and connect device automatically.
- 4. Buy more

Please download the "ROIDMI Vacuum Cleaner" APP, or scan the QR code above to subscribe ROIDMI Wechat Official account for buying more products.

About works with mijia

"works with mijia" indicates the product can be connected and interacted with MI HOME or MI AI. Please kindly notice that "Works with mijia" provides App service only. Xiaomi and Mijia are not responsible for any of the product manufacturing, safety and regulatory standards, or quality supervision.







Product Cleaning

Removal and Installation of the Dust Cup

Step 1: Remove the dust cup

Press the release button of the dust cup, pull the dust cup horizontally to the right.






Turn over the dust cup and rotate the cyclone to clean . If necessary, remove the filter to clean up the dust.



Step 3: Installation instruction of cyclone, dust cup and filter Align the cyclone and the dust cup to the clamp position according to the position shown in the figure, and rotate clockwise until you hear it clicks. When installing the filter element of the dust cup, please align the orange point to the rib position, the dotted line position as shown in the figure, to ensure that the magnet is within the induction range.

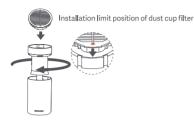


Step 4: Installation instruction of the dust cup Click the anti-off button, insert the dust cup counterclockwise as the below image shows until you hear it clicks.



Removal and Installation Instruction of the Rear Filter

 Step 1: Remove the motor tail cover Align the tip of the cleaner brush to the opening slot of the motor tail cover, press slightly in the vertical direction, lift the tail cover of the motor, and remove it.



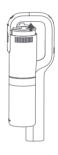

Step 2: Remove the rear filter

Pull up the handle rear filter to remove it.

Step 3: Install the rear filter
Install the rear filter into the limit area of the tail cover of the motor
and press it to the locking position.



Step 4: Install the motor tail cover Press tail cover slightly until you hear it clicks.





- 1. Turn off the power of the vacuum cleaner before cleaning.
- 2. When cleaning, point the dust cup at the garbage can for dis-assembly.
- 3. Do not install the dust cup when it is wet.
- 4. Do not forget to install the dust cup filter element, when installing the filter, install it in the corresponding magnetic position of dust cup.
- 5. When installing the cyclone, please align to the clamp position and rotate for installation. Do not force or press to install.
- 6. When installing the dust cup, make sure that the dust cup anti-off button has been installed in the right place to avoid falling and damaging foot or floor.

Component Cleaning

Step 1: Cyclone cleaning

Take out the cyclone first and then clean the dust and hairs attached in the metal mesh and the duct.



Step 3: Filter element cleaning

Take out the filter element, clean suspended dust with a cleaner brush. If necessary, replace the specified dust cup filter element. It is recommended to replace the specified filter element every 3 months to ensure cleanness.



 
Step 2: Dust cup and metal mesh cleaning

Clean the dust cup and metal mesh with water and use after drying in case dust caking.



Step 4: Back part element cleaning

Take out the back part filter element, clean suspended dust with a clean brush. If necessary, replace the specified back part filter element. It is recommended to clean every 6 months and replace it every year to ensure cleanness.

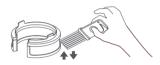




Attention


- 1. Do not drag the dust separator of cyclone mechanism forcibly to avoid damaging to the metal mesh.
- 2. Dry naturally after washing to avoid corrosion.
- 3. Please use the original dust cup and filter to avoid the damage to the vacuum cleaner.
- 4. Please use the original cleaner brush to clean the dust cup filter element. Do not use steel brushes or other high strength brushes to cleaning. 5. When cleaning the back part element, please clean along the direction of the filter mesh, do not clean along other directions, in order to avoid damage to the back part element.
- 6. Do not wash the back part filter element with water.


Rolling Brush Replacement

Step 1: Remove the rolling brush

 Place the electric brush upside down, press the rolling brush release button, to remove the rolling brush fixing block,remove the rolling brush to clean the surface dirty stuff.

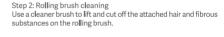

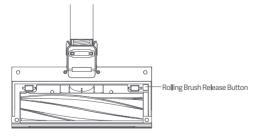

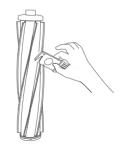



Attention

1.Turn off the power when replacing the rolling brush.

2.The cleaner brush has a sharp blade, which is used to cut off any entanglement stuff around the brush. Children should not be exposed to use the cleaner brush.

3.Do not forget to fixed the block after place the rolling brush, do not use electric brush without block fixed.

Product Troubleshooting

When the vacuum cleaner can't operate normally, you can troubleshoot by yourself or contact the customer service in time.

Fault Description	Fault Causes	Solutions	
Electric Rolling Brush Not Running	Rolling brush has too much entanglement, such as hair fiber and other long impurities	Clean up the brush entanglement	
Electric Rolling Brush Not Rullining	Soft velvet rolling brushes are used on unsuitable surfaces	Replace with the carbon fiber rolling brush and change the use environment	
	Low battery	Charge the vacuum cleaner	
Motor Not Working	The dust cup is fu ll	Empty the dust	
	Long running, high temperature	Restart the machine for use after static cooling	
	The dust cup filter is covered with dust	Clean or replace the dust cup filter	
Suction Power Reduction of Vacuum Cleaner	The air inlet pipe of electric brush was blocked or the brush can't work	Clean up the garbage that is attached to the electric rolling brush	
	Paper or wool fibers clogged in metal mesh holes	Regularly check if the metal mesh is clogged	
Suction Power Reduction Air duct between dust cup and host is clogged		Regularly check if there is garbage in the air duct between dust cup and main machine	
Charger Indicator LEDs Not On or Not Flashing During Charging	The power adapter is not properly plugged in	Regularly check if the power adapter is plugged in properly	
Small Roller of the Rolling Brush Stops Running	Small roller is winded with hairs and other foreign matters	Remove and replace with a new one	

Detailed Packing List

Name	Quantity	Name	Quantity	
Main Machine	•	Metal Connecting Rod	•	
Electric Brush	•	Mattress Brush	•	
Long Flat Suction	•	Sofa Brush	•	
Soft Velvet Rolling Brush	•	Carbon Fiber Rolling Brush	•	
Extension Hose	•	Wall-fixed Charging Box	•	
Adapter	•	Dust Cup Filter Element	• ×2	
Cleaning Brush	•	Rear Filter Element	•	
Instruction	•	Water Tank Module	•	
Note: The rear filter element and a dust cup filter element have been installed into the main machine when the vacuum cleaner leaves the factory.				

Basic Parameters

Product Name	Cordless Vacuum Cleaner	Product Model	XCQ06RM
Rated Operating Voltage	28.8V	Rated Capacity	400W
Lithium Battery Capacity	2500mAh/72Wh	Product Size	1191 × 259 × 158mm
Rated Charging Voltage	34.2V — Charging Time		About 2.5 hours
Product Net Weight	About 2.6kg	Dust Cup Capacity	About 0.4L
Duration (Standard/High/Enhanced)	About 65 minutes/35minutes/10minutes	Rated Capacity Of Electric Brush	35W
Electric Brush Model	XCQDS03RM	Noise	< 83dB (A)
Product Gross Weight	About6.2kg	Total Rated Capacity	435W

Device Requirements: Support devices with Android 4.4 or iOS 9.0 version and above (iPhone 4S and above). The device contains the model approval code: radio transmitter module of CMIIT ID: 2016DP1395.

Statement of Harmful Substances

Part Name	Toxic or Hazardous Substances and Elements					
Partivallie	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Plastic Shell	0	0	0	0	0	0
Circuit Board	Х	0	0	0	0	0
Cable	0	0	0	0	0	0
Battery	Х	0	0	0	0	0
Adapter	Х	0	0	0	0	0
Magnet	0	0	0	0	0	0

This form is prepared in compliance with SJ/T 11364.







- O: Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in GB/T 26572.
- X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit specified in GB/T 26572.

This Attestation implies that the examined types are in accordance with the standards designated under the Use of hazardous substances directive (RoHS) 2011/65/EU.

This product meets RoHS environmental protection requirements. At present, there is no mature technology in the world to replace or reduce the lead content in electronic ceramics and copper alloys. The term of renvironmental protection marked by this product refers to that under normal use conditions, the product contains harmful substances or elements that will not leak out.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout in the EU. To prevent harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Warranty

The after-sale service of cordless vacuum cleaner is implemented in strict accordance with the "Law of the PRC on the Protection of Consumers' Rights and Interests" and the "Law of the PRC on Product Quality". The detailed service contents are as follows:

1. Within 7 days from the date of your signed acceptance, if there are performance failures as listed in the "Cordless Vacuum Cleaner Product Performance Failure Table", the product can be returned or exchanged free of charge through the test of ROIDMI after-sales service center.

2. Within 8-15 days from the next day of your receiving signature, if there are performance failures as listed in the "Cordless Vacuum Cleaner Product Performance Failure Table", the product can be exchanged or repaired free of charge after tested by ROIDMI after-sales service center.
3. Within 12 months from the next day of your signed acceptance, if there are performance failures as listed in the "Cordless Vacuum Cleaner Product Performance Failure Table", the product can be repaired free of charge after tested by ROIDMI after-sales service center.

Friendly Reminder: Since the packing boxes are used to ensure the safety during transportation, it is recommended that you keep the packing boxes for at least 30 days from the date of signing acceptance.

Warranty Contents

Type Warranty Content		Warranty Time
	Main Machine 24 months	
Cordless Vacuum Cleaner	Dust Cup Filter Element	Accessory consumable material, no warranty period

Non-warranty Ordinance

- 1. Unauthorized maintenance, misuse, collision, negligence, abuse, liquid inlet, accident, alteration, incorrect use of accessories other than this product, tear or alter the labels, anti-counterfeiting marks.
- 2. It has exceeded the validity period of free warranties.
- 3. Damages caused by force majeure.
- 4. Failures that do not conform to the performance faults listed in the "Cordless Vacuum Cleaner Product Performance Failure Table".
- 5. The product and its accessories have the performance failures listed in the "Cordless Vacuum Cleaner Product Performance Failure Table" due to human reasons.

Cordless Vacuum Cleaner Performance Fault List

Name	Performance Fault
	The machine cannot be started under normal use.
Cordless Vacuum Cleaner	Rolling brush does not rotate under normal use.
	The indicator light remains the same under normal use.

Cordless Vacuum Cleaner Product Warranty Card

User Name	Product Name and Model	
Communication Address	Product Main Machine Serial No.	
Contact Information	Purchase Date	

This warranty card contains personal information of consumers, please keep it properly.

Cordless Vacuum Cleaner Product Maintenance Record

Maintenance Center	Fault Description	Accessory Replacement	Maintenance Engineer	Maintenance Date



Privileges for Exclusive Services